User Manual

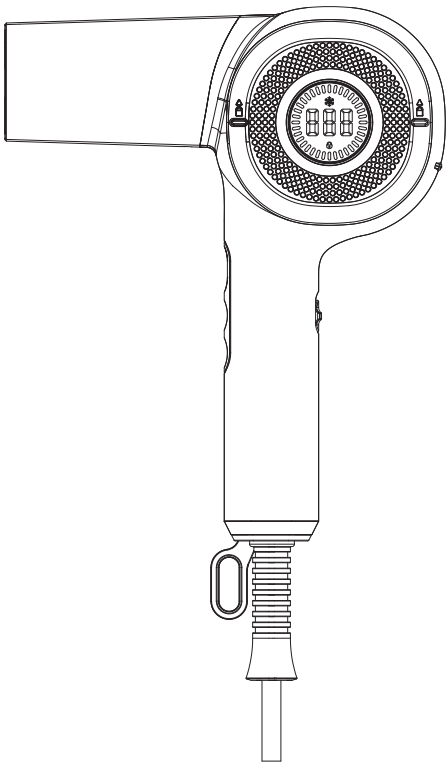

Input: 220-240V~ 50Hz 1600W

Safety Precautions

When using the hair dryer, always ensure to follow basic safety precautions as stated below. Please read ALL instructions carefully BEFORE using the product and keep this manual in a safe place for future reference.

1. This hair dryer must never be used in the bath,shower or over a sinkfilled with water, nor may it be used with wet hands.
2. Do not put anything to block the Air Outlet and Air Inlet of the appliance while it is being used.
3. The appliance must not be submerged in water or come into contact with water during cleaning.
4. If not operating the appliance for an extended period,switch it off.
5. Remove the plug after finish. Do not pull the cable out of the socket.
6. The appliance must not be used, if the cord is damaged or if there is visible damage to the appliance
7. Children are not aware of the danger which can arise when using electrical appliances. For this reason, never allow children to use electrical devices unsupervised. Children should be supervised to ensure that they do not play with the appliance.
8. Prior to cleaning or maintenance, the appliance must be disconnected from the power supply.
9. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge.
10. If the appliance does fall into water, pull the plug out of the wall socket immediately! NEVER PUTYOUR HAND INTO WATER!
11. When using sprays or atomizers, make sure the appliance is out of range.

1.This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved

2. Children being supervised not to play with the appliance.

3. When the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.

4. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

5.  Do not use this device in a bathtub, shower, or water-filled reservoir.

6. WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

8. Cleaning and user maintenance shall not be made by children without supervision.

Illustration

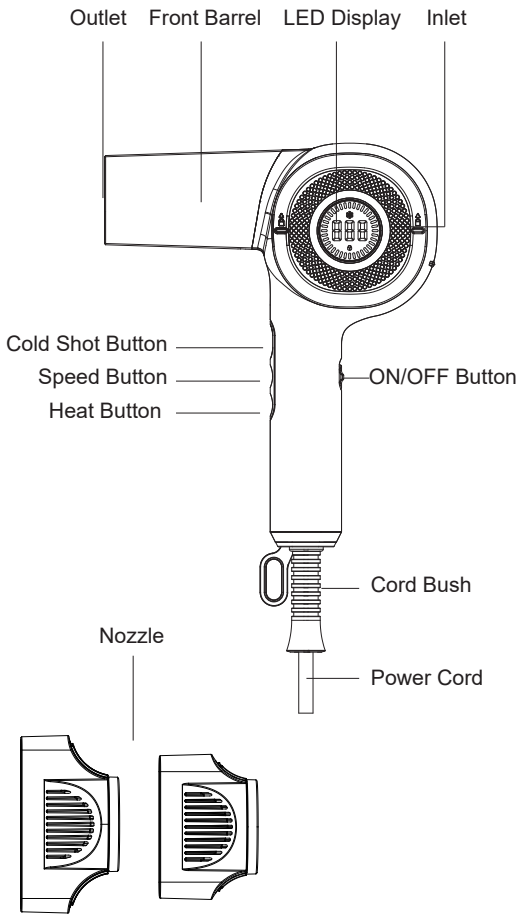

LED Display



● Display

Heat **:** 4 levels with “WHITE” color.
Speed **:** 4 levels with “WHITE” color.
Memory function: power “ON” with last setting of “Heat” & “Speed.
Cold shot button: “ ” when press cold shot button or without heat level indicates.

Instruction

● Access into the rated socket

POWER ON/OFF - Press the “⏻”button for power on & press it again for power off.


ON/OFF Button

Remark: Memory function it starts with last setting of “Heat” & “Speed” level.

Press Speed: “ ”to adjust speed level, total 4 levels in “GREEN” color.


Speed Button

Press Heat : “ ”to adjust heat level, total 4 levels in “RED” color.


Heat Button

Maintenance

Before maintenance, please make sure unplug first and allow the dryer to cool down.

Inlet cap: Take off by counter clock wise rotation and use brush or vacuum to clean dust.

Inlet

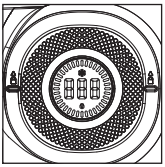

Self-Clean function:
At standby mode,press and hold cold shot button "❄"for 5 seconds to activate, the motor run reversely 15 seconds long for Self-Clean.
Lock function:
At working status, press and hold " ❄ " cool shot button for 3 seconds to lock the appliance meantime other buttons are unuseful except power button, lock symbol " 🔒 "appears on the display. To unlock the appliance, press and hold " ❄ " cool shot button 3 seconds again to realize.